


A pressure sensor, digital VAV controller and damper actuator all in one, providing a VAV-Compact solution with a communications capability for pressure-independent VAV systems in the comfort zone

- Control function: VAV
- Control: LONWORKS®
- Integration into LONWORKS® systems
- Conversion of sensor signals
- Service button and LEDs for servicing and commissioning
- Diagnostic socket for operating devices



LMV-D2LON

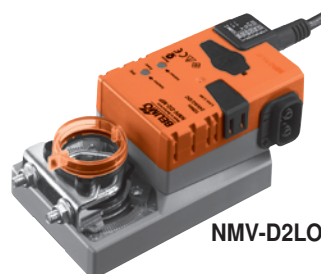

NMV-D2LON


**Brief description**

<b>Application</b>	The digital VAV-Compact has PI control characteristics and is used for pressure-independent control of VAV units in the comfort zone.
<b>Mode of operation</b>	The actuator is equipped with an integrated interface for LONWORKS®. The actuator can be directly connected and controlled with LONWORKS® via a FTT-10A transceiver.
<b>Converter for sensors</b>	Connection option for a sensor (active sensor or switching contact). In this way, the analog sensor signal can be easily digitised and transferred to LONWORKS®.
<b>Pressure measurement</b>	Maintenance-free, dynamic, differential pressure sensor technology, proven in a wide range of applications, suitable for use in offices, hospital wards, alpine hotels or cruise liners.
<b>Actuator</b>	Three versions available, depending on the size of the VAV unit: 5 / 10 / 20 Nm. – Rotary actuator, depending on size – Linear actuator 150 N with 100, 200 or 300 mm linear motions
<b>VAV – variable air volume</b>	The VAV-Compact is supplied with its modulating setpoint by a room temperature controller via LONWORKS®. This facilitates demand-related, power-saving ventilation in individual rooms or zones of air conditioning systems. The operating range ( $V_{\min}$ und $V_{\max}$ ) can be set either locally with PC-Tool or using the LNS plug-in available from Belimo.
<b>Test function / test display</b>	The VAV-Compact features an LED with a ready display for commissioning and functional checking as well as a service mode with air shortage, excess air and setpoint = actual value display with LEDs.
<b>Operating and service devices</b>	Belimo PC-Tool, remote control or ZEV, plugged into the VAV-Compact.
<b>Assembly and connection</b>	The VAV-Compact, which is assembled on the unit by the OEM, is connected using the pre-fabricated connecting cable.
<b>OEM factory settings</b>	The VAV-Compact is mounted on the VAV unit by the unit manufacturer, who adjusts and tests it according to the application. The VAV-Compact is sold exclusively via the OEM channel for this reason.

**Overview of types**

Type	Torque	Power consumption	For wire sizing	Weight
LMV-D2LON	5 Nm	3 W	5 VA (max. 5 A @ 5 ms)	approx. 500 g
NMV-D2LON	10 Nm	3.5 W	5.5 VA (max. 5 A @ 5 ms)	approx. 700 g

**Safety notes**





- The device is not allowed to be used outside the specified field of application, especially in aircraft or any other form of air transport.
- Assembly must be carried out by trained personnel. Any legal regulations or regulations issued by authorities must be observed during assembly.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The cable must not be removed from the device.
- When calculating the required torque, the specifications supplied by the damper manufacturers (cross section, design, installation site), and the air flow conditions must be observed.
- The device contains electrical and electronic components and is not allowed to be disposed of as household refuse. All locally valid regulations and requirements must be observed.

## Technical data

<b>Supply</b>	
Nominal voltage	AC 24 V, 50/60 Hz DC 24 V
Power supply range	AC 19.2 ... 28.8 V DC 21.6 ... 28.8 V
<b>Differential pressure sensor</b>	
	2 ... ~300 Pa (OEM-specific)
Operating pressure	max. 1000 Pa
Characterising	OEM-specific differential pressure sensor, linearisation
Installation position	Any, no reset necessary
Operating medium (see «Materials»)	Supply and exhaust air in the comfort zone and in applications with sensor-compatible media
Materials	PC + ABS to UL94-V0; stainless steel, DIN 1.4301 X10CrNiS1810; PP Santoprene
Measuring air conditions	0 ... +50 °C / 5 ... 95% r.h., non-condensing
<b>Application</b>	Supply/exhaust air units, integrated into LONWORKS® systems
<b>Operating volumetric flow</b>	
$\dot{V}_{nom}$	OEM-specific nominal volumetric flow setting, matches VAV box
$\dot{V}_{max}$	30 ... 100% of $\dot{V}_{nom}$
$\dot{V}_{min}$	0 ... 100% of $\dot{V}_{nom}$ (see VAV-Compact documentation, page 17 «Minimum setting limit»)
$\dot{V}_{mid}$	0 ... 100% of ( $\dot{V}_{min}$ ... $\dot{V}_{max}$ )
<b>Control</b>	
Measured value signal U <sub>5</sub> (connection 5)	– Adjustable: 2 ... 10 V or 0 ... 10 V – Adjustable: Air volume or damper position } max. 0.5 mA
<b>Bus function LONWORKS®</b>	
Certified	According to LONMARK® 3.3
Processor	Neuron 3120
Transceiver	FTT-10A, compatible with LPT-10
Functional profile	According to LONMARK® / Damper actuator object #8110 / Open loop sensor object #1
LNS plug-in for actuator / sensor	Can be run with any LNS-based integration tool (min. for LNS 3.x)
Service button and status LED	According to LONMARK® guidelines
Conductors, cables	Conductor lengths, cable specifications and topology of the LONWORKS® network according to the ECHELON® directives
<b>Bedienung und Service</b>	
	Pluggable / PC-Tool (V3.1 or higher)
Communication	LONWORKS®
Button	Adaptation / addressing / service function
LED indicator	– 24 V feed – Status / service / bus function
<b>Actuator</b>	
	Brushless, non-blocking actuator with current reduction
Torque (nominal torque)	see «Overview of types» on page 1
Direction of rotation	left / right
Angle of rotation	95° <math>\sphericalangle</math>, with adjustable mechanical or electronic limitin
Adaptation	Setting range recording and resolution to control range
Manual disengagement	Pushbutton, self-resetting without affecting functions
Position indication	Mechanical with pointer
Sound power level	max. 35 dB (A)
Spindle driver	– Clamp, for round spindles 10 ... 20 mm / square spindles 8 ... 16 mm – Positive fit, wide range of versions, e.g. 8 x 8 mm
Anschluss	Cable, 6 x 0.75 mm <sup>2</sup> , terminals
<b>Safety</b>	
Protection class	III Safety extra-low voltage
Degree of protection	IP54
EMC	CE according to 89/336/EEC
Mode of operation	Type 1 (to EN 60730-1)
Rated impulse voltage	0.5 kV (to EN 60730-1)
Control pollution degree	2 (to EN 60730-1)
Ambient conditions	0 ... +50 °C
Non-operating temperature	–20 ... +80 °C
Ambient humidity range	5 ... 95% rH, non-condensating (to EN 60730-1)
Maintenance	Maintenance-free

Functional profile according to LONMARK®

The LON-capable air volume controller is certified by LonMARK®. The controller functions are supplied with the LonWorks® network as standardised network variables according to LonMARK®. The node object #0, the damper actuator object #8110 and the open loop sensor object #1 are implemented in the actuator.

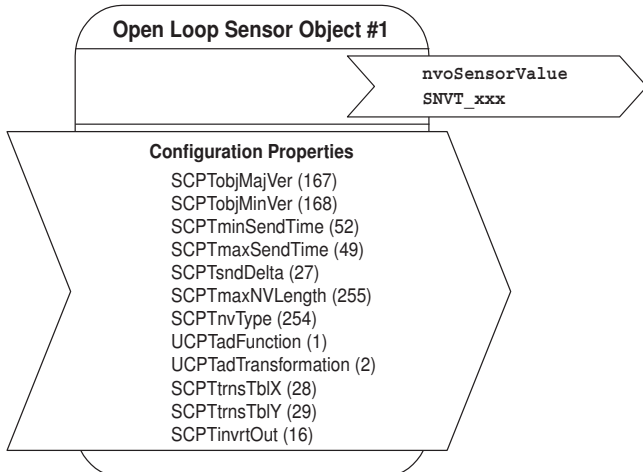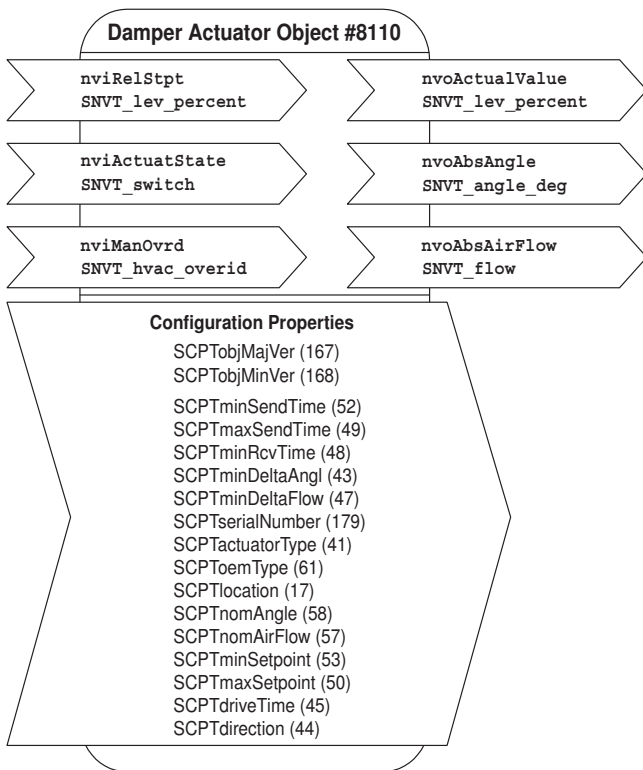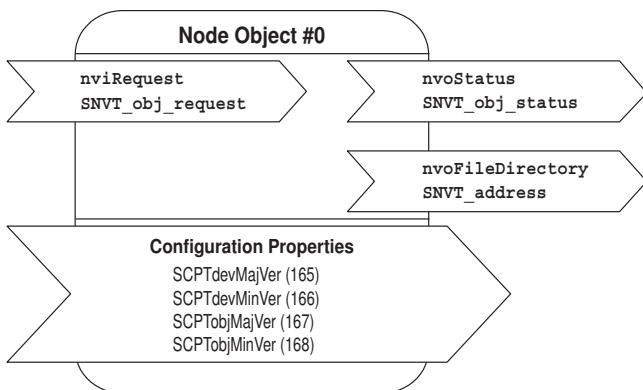

**Node object #0**

The node object contains the object status and object request functions.

**nviRequest**      **SNVT\_obj\_request**  
 Input variable for requesting the status of a particular object in the node.

**nvoStatus**      **SNVT\_obj\_status**  
 Output variable that outputs the current status of a particular object in the node.

**nvoFileDirectory**      **SNVT\_address**  
 Output variable that shows information in the address range of the Neuron chip.

**Damper actuator object #8110**

The actuator object is used to transmit the functions of the actuator to the LONWORKS® network.

**nviRelStpt**      **SNVT\_lev\_percent**  
 Via this input variable, the set volume is specified for the VAV controller in %  $\dot{V}_{Nom}$  of the VAV unit.

This variable is normally linked to the output variable of an HVAC controller.

**nviActuateState**      **SNVT\_switch**  
 Via this input variable, a preset volume is specified for the VAV controller (in %  $\dot{V}_{Nom}$  of the VAV unit).

Note on priority: The last variable that was active, either nviActuatorState or nviRelStpt, has priority.

**nviManOvrd**      **SNVT\_hvac\_overid**  
 Via this input variable, the actuator can be manually overridden to set a particular position or particular volume (in %  $\dot{V}_{Nom}$ ).

**nvoActualValue**      **SNVT\_lev\_percent**  
 This output variable shows the current volume (in %  $\dot{V}_{Nom}$  of the VAV box) and can be used for control circuit feedback or for displaying positions.

**nvoAbsAngle**      **SNVT\_angle\_deg**  
 This output variable shows the current angle of rotation of the actuator or the damper blade and can be used to display the position or for service purposes.

**nvoAbsAirFlow**      **SNVT\_flow**  
 This output variable shows the current volumetric flow through the corresponding VAV unit and can be used for control and display purposes.

**Open loop sensor object #1**

A sensor can be connected to the air volume controller. An active sensor (output 0 ... 32 V) or a switch (on/off) can be connected. In the case of the open loop sensor object, the measured sensor values are transferred to the LONWORKS® network.

**nvoSensorValue**      **SNVT\_XXX**  
 This output variable shows the current sensor value. Depending on the connected sensor, the output variable can be configured via the sensor plug-in and specifically adapted to the system.

The SNVT .. can be configured as:

SNVT_temp_p	SNVT_lev_percent	SNVT_lux
SNVT_temp	SNVT_abs_humid	SNVT_press_p
SNVT_switch	SNVT_enthalpy	SNVT_smo_obscur
SNVT_flow	SNVT_ppm	SNVT_power
SNVT_flow_p	SNVT_rpm	SNVT_elec_kwh


**Note**  
 Detailed information on the functional profiles can be found on the website of LonMARK® (www.lonmark.org).

Override control with the SNVT nviManOvrd

Functions	state	variable used	air flow controller
HVO_OFF	--	--	no reaction
HVO_POSITION	--	percent	no reaction
HVO_FLOW_VALUE	--	flow	0 ... nciNomAirFlow (liter/sec). The value 0xFFFF represents invalid data.
HVO_FLOW_PERCENT	--	percent	0% ... +100.00% (0.005%). The value 0x7FFF represents invalid data.
HVO_OPEN	--	--	full open
HVO_CLOSE	--	--	full closed
HVO_MINIMUM	--	--	configured flow
HVO_MAXIMUM	--	--	configured flow
all others	--	--	not supported

**Note**  
The basic setting is "HVO\_OFF". This value is loaded when the power supply is switched on.

Example	Function	Description
	HVO_OFF	Temperature controller setpoints are active
	HVO_OPEN	All VAV units are fully open (e.g. flushing operation or night cooling)
	HVO_CLOSE	All VAV units are fully closed (system closed when the plant is switched off)

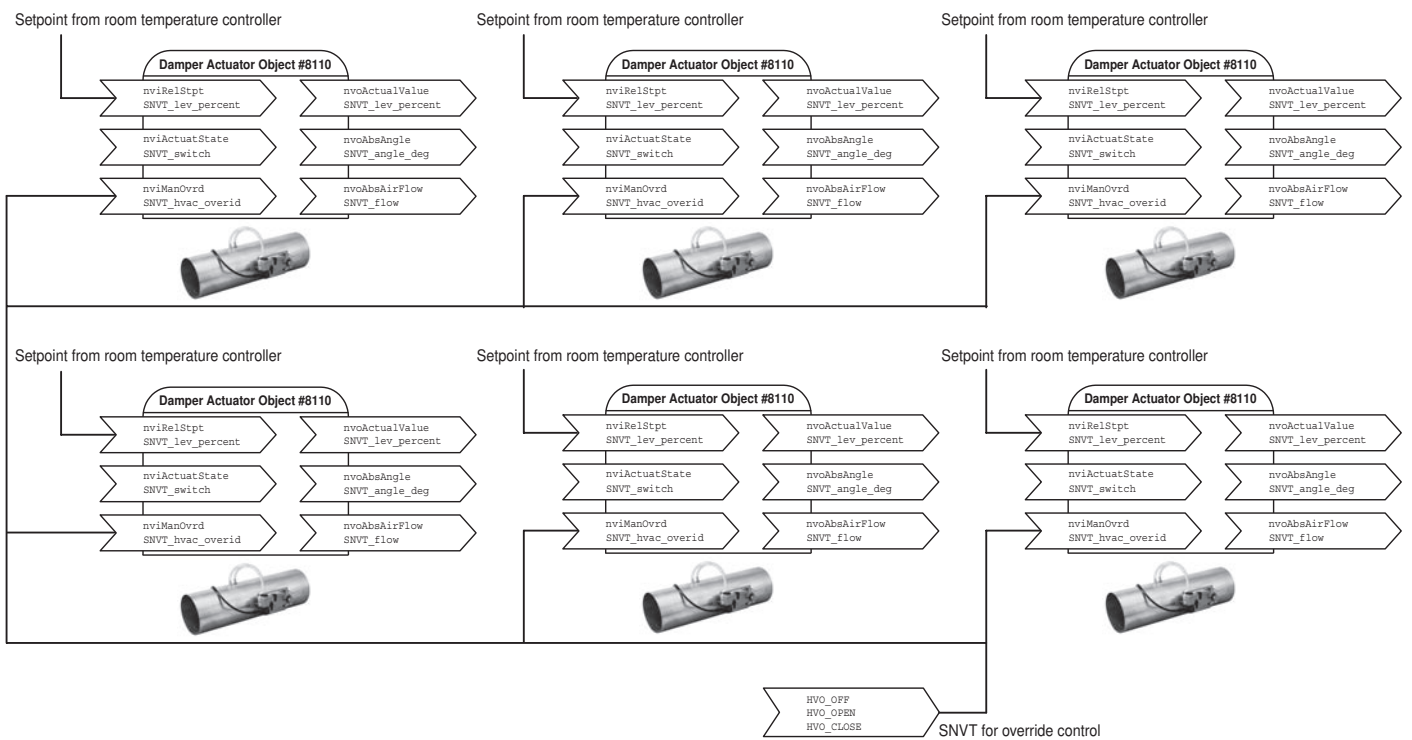

Electrical installation

Wiring diagrams

**Note**

Connect via safety isolation transformer.




**Note**


If no sensor is connected, the analogue override control function can be used.

**Please note:** This only works if the actuator is supplied with AC 24 V.


Connection without sensor

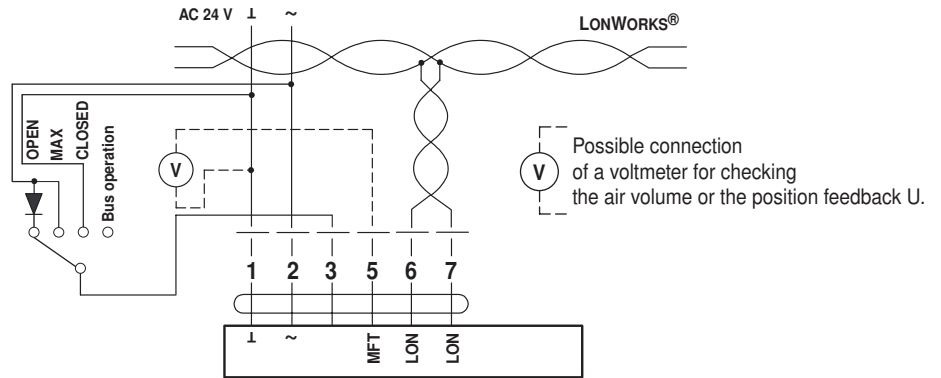

Connection with switching contact, e.g. Δp-monitor

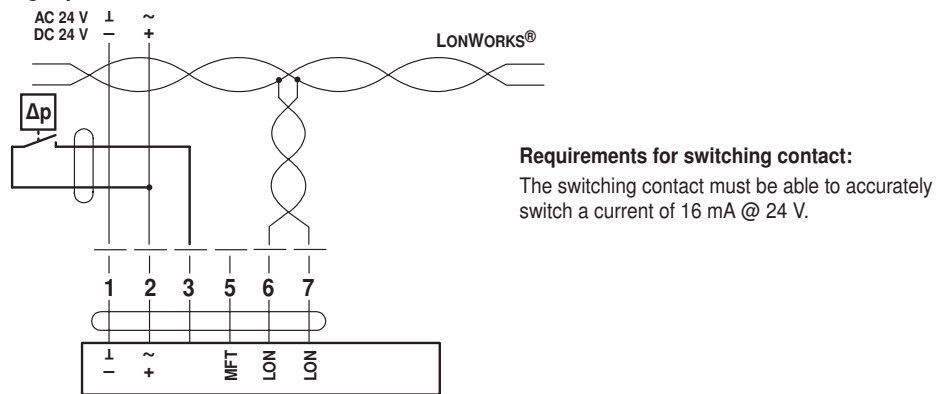

Connection with active sensor, e.g. 0 ... 10 V @ 0 ... 50 °C

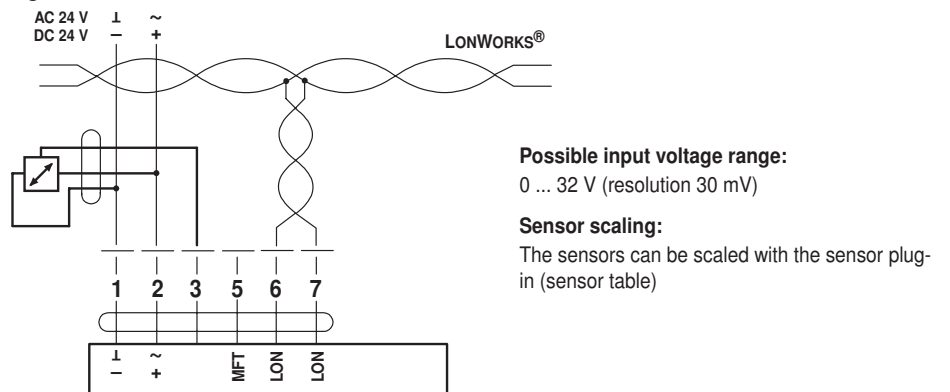

Parameterisation

Connection of the MFT parameterisation devices, e.g. Belimo PC-Tool MFT-P

The actuator can be parameterised as follows:


- $V_{min}$  and  $V_{max}$  settings
- Torque reduction
- Direction of rotation
- Function test or adaption can be triggered
- Air volume or damper position

Parameterisation of the actuator

Parameterisation of the actuator when it has already been integrated in the complete system and is supplied with AC 24 V

Notes


- The actuator can be triggered with the PC-Tool under „PP“.
- The scope of delivery of ZIP-232-KA includes the RS232 cable.
- The connection cable ZK1-GEN has to be ordered separately.

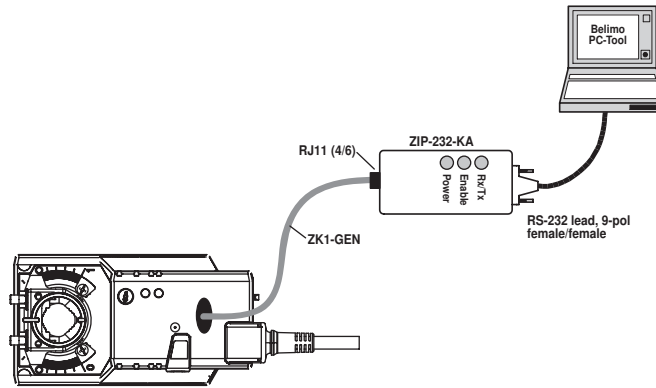

Parameterisation of the actuator before it is integrated in the complete system


Notes

- The actuator can be triggered with the PC-Tool under „PP“.
- The scope of delivery of ZIP-232-KA includes the RS232 cable.
- The power supply unit ZN230-24 has to be ordered separately.

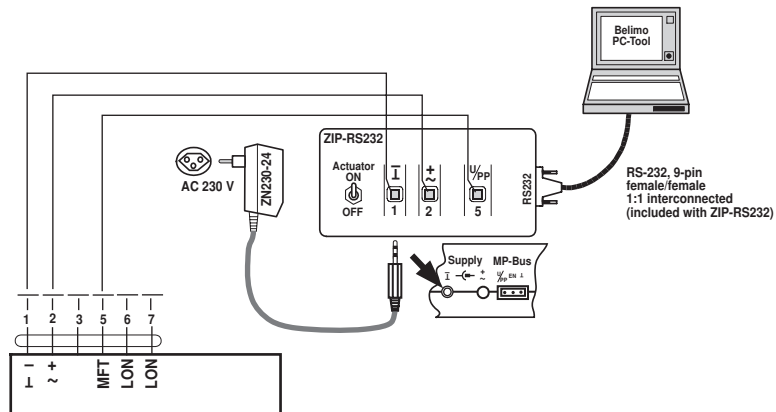


Dimensions [mm]

Dimensional drawings LMV-D2LON

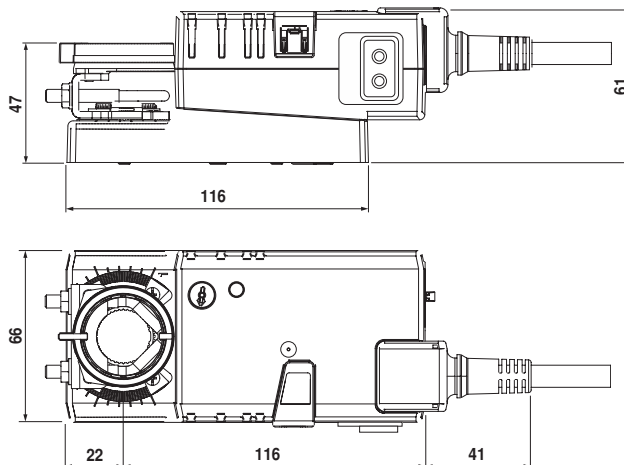

Dimensional drawings NMV-D2LON

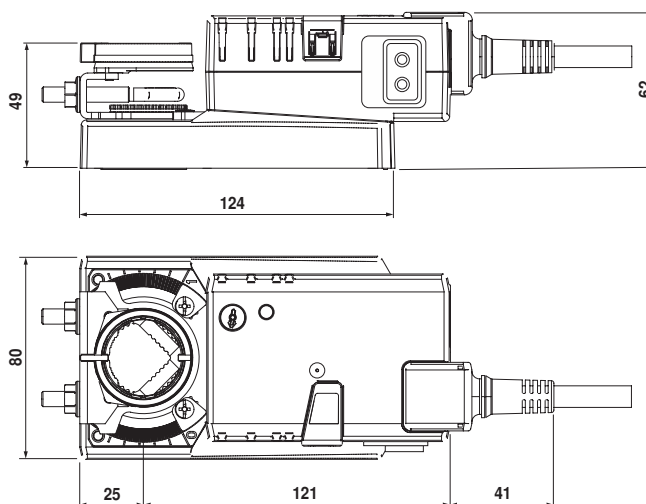

Operating controls and indicators



- ① **Pushbutton and green LED display**

Off:	No voltage supply or fault
Green, on:	Operation
Press button:	Switches on angle of rotation adaption followed by standard operation
- ② **Service button for commissioning for LONWORKS® and yellow LED display for the LON status**

Off:	The damper actuator is ready for operation in the LONWORKS® network.
Yellow, on:	No application software is loaded in the actuator.
Yellow, flashing: (flashing interval 2 s)	The actuator is ready for operation but not integrated in the LONWORKS® network (unconfigured).
Other flashing codes:	A fault is present in the actuator.
Press button:	Service pin message is sent to the LONWORKS® network.
- ③ **Gear disengagement switch**

Press button:	Gear disengaged, motor stops, manual override possible
Release button:	Gear engaged, synchronisation starts, followed by standard operation
- ④ **Service plug**

For connecting MFT parameterising and service tools (see page 5)

Detailed description see Product information S4-VAV-Compact.